



AMERICAN HOME DECOR

THE WAY TO FEEL GOOD



What am I to do if... the ceiling fan is not reversing

If you've attempted to reverse your ceiling fan for the winter, but noticed no change in the direction of the fan blades, there could be several causes. Turn off the ceiling fan and allow the blades to come to a full stop before flipping the switch. Follow the steps below to determine the cause:

1. Confirm the reverse switch is not in a neutral position. Flip the switch several times to make sure it is the right place.
2. If you are using a remote or wall control to reverse the ceiling fan, make sure the codes on the control and receiver are set to the same frequency.

If your ceiling fan is new, go through each of the steps listed above. Click [here](#) to find more advices regarding ceiling fan troubles on Casa Bruno's website. If the issue is not resolved, contact your ceiling fan dealer and explain the problem.

If you have an older ceiling fan, perhaps it's time to upgrade to a new ceiling fan. Check out the ceiling fans on [Casa Bruno's website](#).

Contact please: 

CASA BRUNO AMERICAN HOME DECOR



Spain: ES 07180 Santa Ponsa - Tel. +34.971.699 273

Email: info@casabruno.com

Deutschland: DE 31916 Isernhagen - Tel. +49.5136.804 1716